







## Multi-Tube 60/108

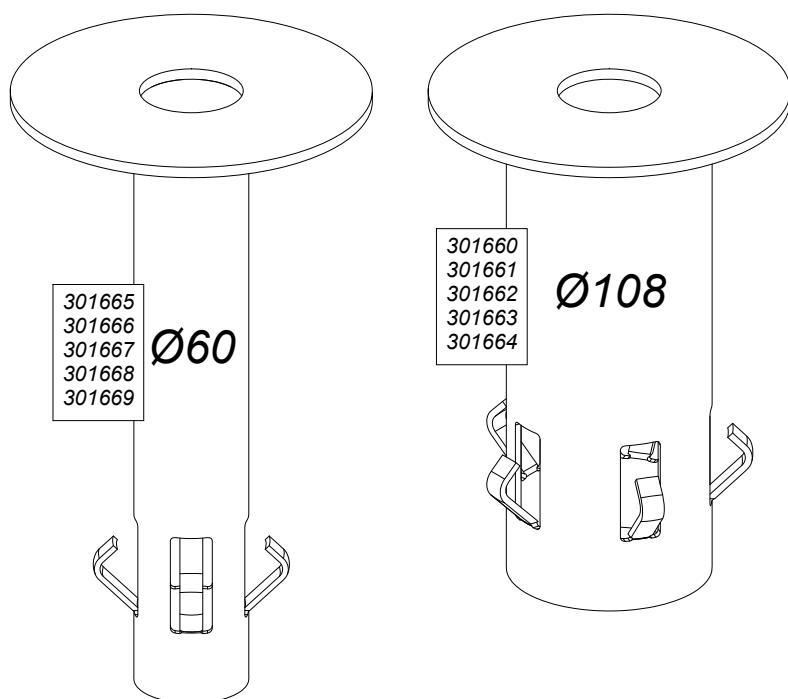

### Mounting

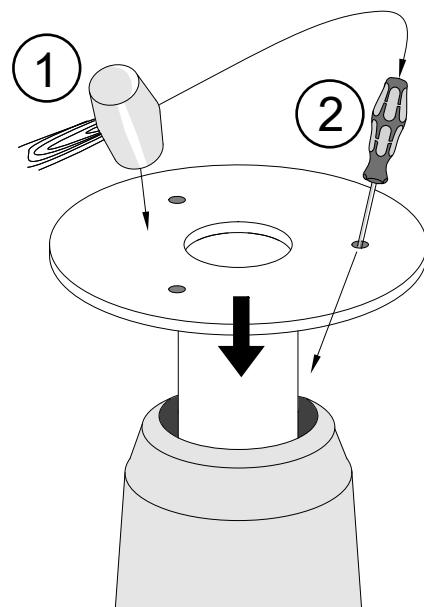

### Dismounting

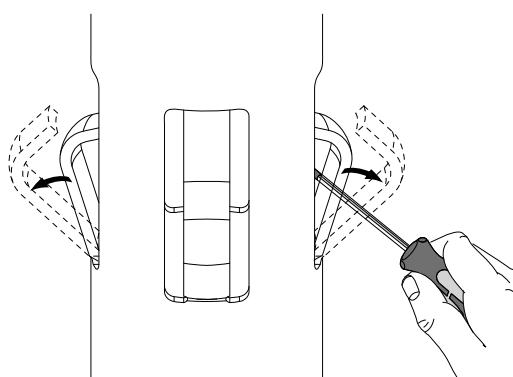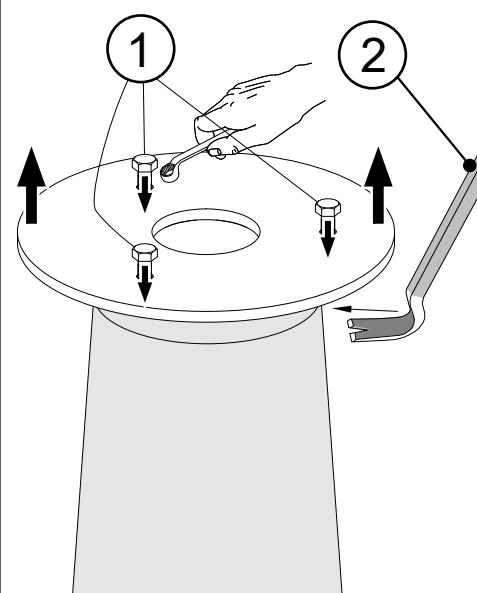

If you need to re-position, bend out the flaps before placing the tube back in the pole foundation

# 301660/301665\_Ø160 Plate

Screwkit 5439663

## Mini Ikonic


M6x30 3 pcs.  
6,4x12x1,6 3 pcs.

## Minicubiks

M6X12 2 pcs.  
6,4x12x1,6 2 pcs.

## Tomorrow

M6X30 3 pcs.  
6,4x12x1,6 3 pcs.

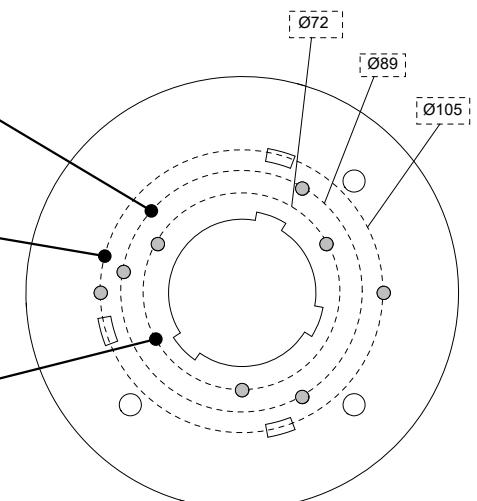

# 301661/301666\_Ø170 Plate

Screwkit 5439665

## Miniblinker / Mini Moai

M6x40 4 pcs.  
6,4x12x1,6 4 pcs.

## Microreef Bollard


M5x25 4 pcs.  
5,3x10x1 4 pcs.

## Microreef Head Only

M4x12 2 pcs.  
4,3x9x0,8 2 pcs.

## Minicolumn

Fjord  
M6x30 3 pcs.  
6,4x12x1,6 3 pcs.

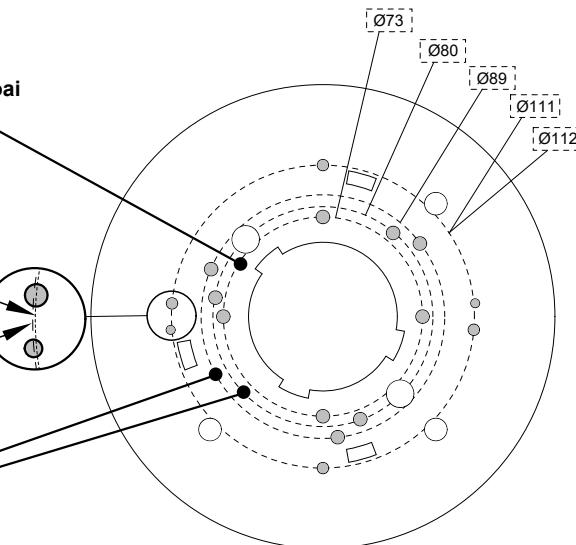

Bracket dismounting: Choose a threaded hole positioned over the foundation

# 301662/301667\_Ø180 Plate

Screwkit 5439666

## Blinker Cubiks Moai

M8x40 4 pcs.  
10,5x20x2 12 pcs.

## Minireef Bollard


M8x30 4 pcs.  
10,5x20x2 4 pcs.

## Minireef Head only

M6X20 4 pcs.  
6,4x12x1,6 8 pcs.

## Tonight 200

M8x40 3 pcs.  
10,5x20x2 9 pcs.

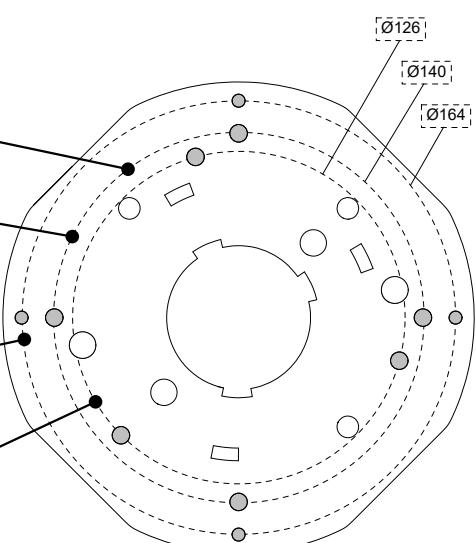

# 301663/301668\_Ø190 Plate

Screwkit 5439667 (Ø60)  
Screwkit 5441188 (Ø108)

## Ikonic

M8X35 3 pcs.

## On Ground


M10X16 3 pcs.  
10,5x20x2 3 pcs.

## Vivita/Verda Ø60

M10X16 3 pcs.  
10,5x20x2 9 pcs.

## Vivita/Verda Ø108

M10X16 3 pcs.  
10,5x20x2 3 pcs.

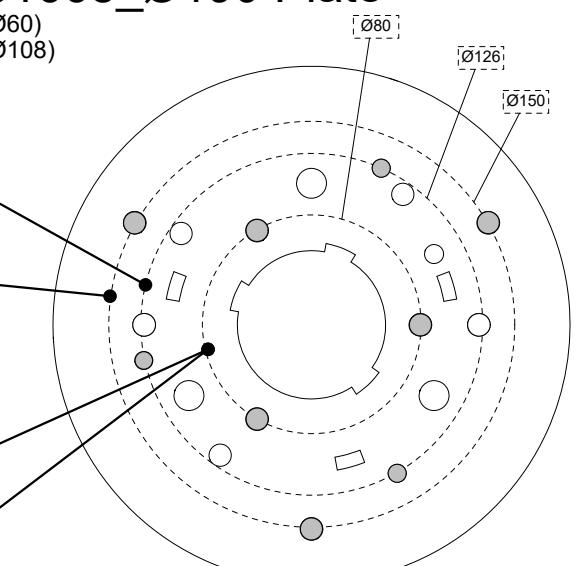

Bracket dismounting: Choose a threaded hole positioned over the foundation

# 301664/301669\_Ø240 Plate

Screwkit 5439668

## Mega Cubiks


M8X45 4 pcs.  
8,4x16x1,6 4 pcs.

## Reef Bollard / Tonight 250

M8x40 4 pcs.  
8,4x16x1,6 4 pcs.

## Reef Head Only

M8x25 4 pcs.  
8,4x16x1,6 4 pcs.

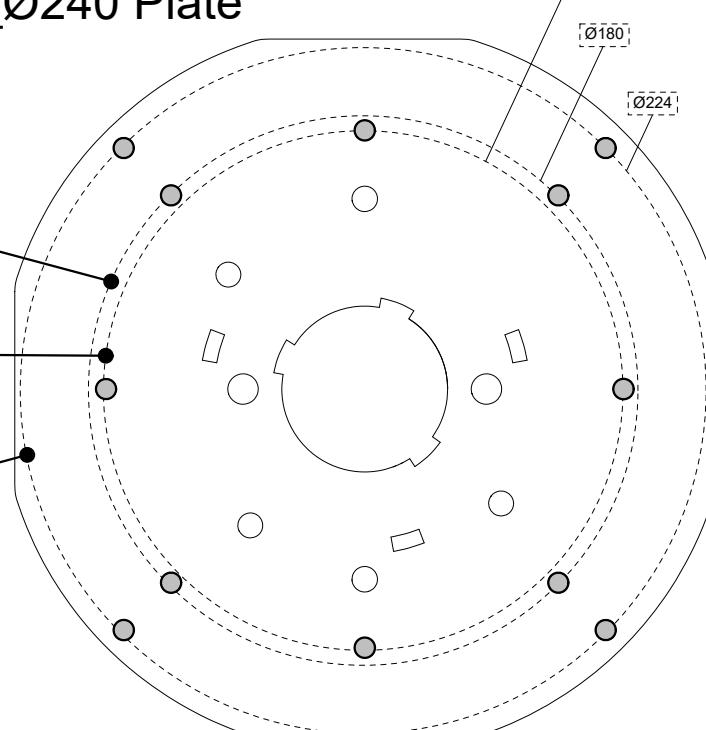

Bracket dismounting: Choose a threaded hole positioned over the foundation